

Champagne Xpress

B O T T L E O P E N E R



Locate the eyelet of the wire muzzle under the foil and bend it forward. Without removing the foil, hook the pointed "horn" at the top of the Champagne Xpress into the wire eyelet.



With the handles slightly apart, pull the eyelet up with the horn while turning the "top hat" section of the Champagne Xpress up and over to rest on top of the cork.



Capture the cork, still in the foil, by gripping the handles together so the two spikes on either side dig into the cork.



Rock the front of the Champagne Xpress upward by applying downward pressure on the handles with the heel of your hand. This breaks the wire. Continue gripping the Champagne Xpress and simultaneously pull up on the handles while turning the opener to remove the cork.



The pop of the cork tells you that it has been safely removed from the bottle. Spread the handles of the opener to remove the cork, wire muzzle, and foil.

NOTE: YOU MAY TWIST QUICKLY AND "POP" THE CORK OUT. BUT, IF YOU PREFER, YOU MAY SLOWLY TWIST AND GENTLY LIFT THE CORK OUT SO THAT IT DOES NOT "POP." YOU CONTROL THE CORK SO THIS IS YOUR OPTION.