

## REPLACEMENT PARTS



# SODASIPHON

INSTRUCTION BOOKLET



For Questions about your siphon or to order parts

[www.sparklebottle.com](http://www.sparklebottle.com)


Congratulations! You have purchased a high quality Classic Glass® Soda Siphon. With proper care, your new Classic Glass Soda Siphon will provide you years of use. Before using, please carefully read all instructions, cleaning information, and safety precautions.

Instructions for use:

1. Before filling your soda siphon, always inspect the item to make sure it is clean and free from any damage or wear.
2. Fill the soda siphon with water to the measuring line located about two-thirds the way up the glass bottle. For best results, use very cold water (1).
3. Insert the long plastic tube into the top of the bottle (2).
4. Firmly screw on the head of the siphon clockwise, taking caution not to over-tighten (3).
5. Insert one CO2 charger into the charger holder (4).
6. Screw the charger holder onto the head of the siphon until you hear a hiss and the gas is released. Only use 1 charger. Do not remove cartridge holder for a minimum of 10 minutes.
7. Shake soda siphon well. Allow charged water to "rest" for a minimum of 10 minutes to achieve full effervescence. Chilling siphon will also help. To dispense water gently press lever and direct water towards the side of the glass (6).
8. For best results, refrigerate the soda siphon for at least one hour. It preferable not to keep the soda water for more than two days.

Safety precautions:

1. Please use your soda siphon only for its intended use. Soda siphons and soda cartridges are highly-pressurized and misuse could cause harm to you and the product. For this reason, always keep your soda siphon and soda chargers out of the reach of children.
2. Never attempt to modify your soda siphon by yourself. Repair may only be done by the manufacturer or a technician. Any attempt to modify the device could cause harm to yourself or the bottle. Any modifications done to the bottle will automatically terminate all warranties and liabilities.
3. Always inspect your soda siphon for wear and damage before each use. Never attempt to use your soda siphon if it becomes damaged or broken. If a soda siphon is dropped or is believed to be damaged, please return the item to the manufacturer for a safety check.
4. Never fill your soda siphon with anything other than clean, non-carbonated water. Filling your siphon with other liquids or syrups can be dangerous.
5. Never expose your soda siphon to heat (stove, microwave, sun, etc.).
6. Never place your soda siphon in the freezer or expose it to extreme cold.
7. For safety, never stand directly over the soda siphon or hold close to your body when charging it.
8. Only use non-abrasive cleaners with your soda siphon.

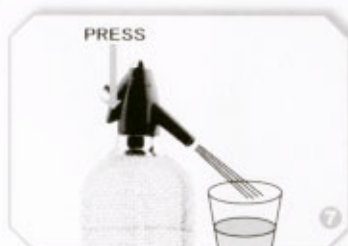

**Warranty**

Manufacturer warrants that defective soda siphon (faulty materials or construction) will be repaired free of charge (freight prepaid) for a period of one year from date of purchase. Excluded from this warranty are parts subject to normal wear. This warranty does not cover any liability for malfunction caused by improper use, use of damaged parts, or any consequential damage. Please use only original parts and read and follow instructions carefully.