



UPLIFT KETTLE

Use & Care

How to Use

- Before initial use, wash the inside of the Kettle and rinse thoroughly.
- Fill Kettle through large lid opening to a maximum of 1.7 quarts.
- Use low or medium temperature setting. Caution: Do not place empty Kettle on flame or active heating element.
- Handle hot Kettle by handle only. Do not touch any other part including lid, lid handle, and zinc levers while Kettle is still hot.
- To pour, just lift the Kettle by its handle and the spout cap opens automatically.
- After pouring, set the Kettle down and press the handle downward to close the spout cap.

How to Clean

- Before initial use, wash the inside of the Kettle and rinse thoroughly.
- To clean, hand wash with warm water and dish liquid. Do not use abrasive powders or steel wool which might damage surface of Kettle. Dry with soft cloth. Do not place in dishwasher.
- For removal of mineral deposits and rust stains from inside Kettle, combine two tablespoons of baking soda and lemon juice with water, boil for 30 minutes and rinse thoroughly.

CAUTION!

- Do not let water boil completely out of Kettle. If boiled dry, turn off burner and wait until Kettle cools before handling it. Boiling dry may damage Kettle. If this occurs, do not reuse Kettle.
- Always center Kettle over flame or heating element. Do not let flame extend beyond sides of Kettle, and do not use on heating element larger than bottom of Kettle, as this may damage plastic parts.
- Do not place lid near flame or heating element.

Satisfaction Guarantee

We guarantee everything we make! If for any reason you are not satisfied with an OXO product, return it for replacement or refund. Please contact OXO's Customer Service Department and we will be happy to assist you:

OXO Consumer Care Center 1331 South Seventh St. Second Floor, Chambersburg, PA 17201
Phone: (800) 545-4411 Fax: (717) 709-5350 www.oxo.com