

SWIFTTURN™

Designed as part of the SWIFTPULL® family of hand-held uncorking equipment, this easy-to-use Champagne opener will provide the perfect finish to your SWIFTPULL® collection.



1. Find the small wire eyelet under the foil and raise it up. There is no need to remove the foil or the wire muzzle. Pressure in the bottle will be enough to remove all of this later.



2. Place the SWIFTTURN™ over the top of the bottle with the wire eyelet facing up. Squeeze the teeth of the handles firmly into the cork. Keep a firm grip on the cork during step 3. Rubber perforations in handle assure a positive, non-slip grip.



3. Hold the bottle at a 45° angle, resting the bottom edge of the bottle on a flat surface.

4. Wiggle the wire eyelet back and forth 7 or 8 times until it breaks (not shown). This type of wire is purposely made brittle, so it will break. You may also untwist the eyelet to loosen the wire muzzle, if you wish.



5. Grip the bottle around the shoulder. Twist the SWIFTTURN™ in one direction and the bottle in the opposite direction. Twist back and forth gently and slowly to avoid a loud "pop." The cork will come up and out assisted by the pressure from within the bottle.