

How to Use Your Twist 'n Sparkle  
 Utilisation de votre Twist 'n Sparkle  
 Cómo utilizar el sistema Twist 'n Sparkle



The Twist 'n Sparkle System  
 Le système Twist 'n Sparkle  
 El sistema Twist 'n Sparkle



Sparkling Wand  
 Tige de gazéification  
 Varilla de gasificación



Reusable Bottle  
 Bouteille réutilisable  
 Botella reutilizable



Sparklets® soda charger  
 Cartouche de CO<sub>2</sub> Sparklets®  
 Cápsula de gas Sparklets®



iSi North America, Inc.  
 175 Route 46 West  
 Fairfield, NJ 07004  
 (800) 447-2426

customerservice@isinorthamerica.com  
 www.isinorthamerica.com

## Congratulations on the purchase of your new iSi Twist 'n Sparkle – a quality product from iSi.

The iSi Twist 'n Sparkle is a great way to give your everyday and specialty beverages extra flavor and pizzazz – with a twist! With the iSi Twist 'n Sparkle, you can carbonate juices, iced teas, cocktails, as well as still water. The options for your own sparkling beverage creations are endless.

The original iSi Sparklets® soda charger gives your favorite beverage an exciting sparkle every time.

## Safety Instructions

### CAUTION

Read all instructions and cautions before using; be sure to observe all safety cautions; use the Twist 'n Sparkle Sparkling System only as described in these instructions; and store this manual in a safe place for easy reference.

Children should not be allowed to use the Twist 'n Sparkle Sparkling System, but can, of course, enjoy the drinks produced. Store the product out of the reach of children to avoid accidental injury.

This product becomes a pressure vessel during use. Improper handling of the Twist 'n Sparkle Sparkling System or damage to the product could result in physical injury. To avoid this risk:

- Operate the system only when filled with cold liquid; do not operate when empty; carbonating hot liquids could result in bursting of the bottle and must be avoided.
- Do not use force while handling the Twist 'n Sparkle Sparkling System; force can damage components.
- The chamber of the sparkling wand must be closed while screwing it on the bottle and should always be attached straight. Avoid cross threading and do not use the product if the wand is not attached straight.
- Do not lean over the bottle while attaching the sparkling wand; be sure the top is pointed away from anyone's face.
- Remove the wand only after the charger has completely finished discharging; never loosen or remove the wand while the charger is discharging.
- Hand wash the product components only; do not put any component in a dishwasher; use only ordinary dish soap for washing.
- Keep the bottle away from direct sunlight, heat, or temperatures below freezing; do not place in the freezer compartment.
- Dropping any component can result in damage, and it should not be used again until checked by iSi North America, Inc.'s Customer Service Dept.
- Replace bottle if scratched, deformed, discolored or otherwise damaged, or the printed expiration date has been reached.

Protect the chargers from direct sunlight and heat above 122 °F/50 °C. Never dispose of chargers while still full.

The components of this product are designed to fit tightly together to function optimally and to avoid injury. Use of chargers from another manufacturer or any alteration of the product results in a risk of physical injury. Use only original iSi Sparklets soda chargers. Any alteration of the product invalidates the warranty.

In the event of physical injury, seek appropriate medical attention immediately.

## Product Features

- The iSi Twist 'n Sparkle Sparkling System consists of the sparkling wand, the reusable bottle, and the Sparklets soda charger.
- Designed to directly carbonate juices, iced teas, cocktails, and water.
- The sparkling wand allows the sequential carbonation of multiple bottles.
- Does not take up valuable countertop space.
- No electric power or batteries needed.
- Reusable bottle has a max. fill level of 4 cups/950 ml.
- iSi Sparklets soda chargers are non-refillable, however they are recyclable and never expire.

**NOTE:** Be sure to observe the Safety Instructions.

For helpful carbonation tips refer to "Tips for Best Results".

Before using your new Twist 'n Sparkle for the first time, perform basic cleaning as described in the "Cleaning" section.

## HOW TO USE YOUR TWIST 'N SPARKLE

- Fig. 1** Fill the reusable bottle with cold water to the upper level mark (4 cups/950 ml) for sparkling water. For all other beverage creations, including those containing juice, iced teas, or alcohol, fill the reusable bottle to the lower level mark (3 cups/720 ml).
- Fig. 2** Insert one iSi Sparklets soda charger into the chamber in the wand's handle as shown in the picture and close the sparkling wand securely. Make sure the charger has been inserted in the correct position in the wand's chamber.

**NOTE:** Do not insert the charger when the wand is attached to the bottle. The wand must be opened completely for easy insertion of the charger.

- Fig. 3** Place the filled bottle in an upright and stable position. Twist the sparkling wand clockwise so that it attaches straight to the bottle. The soda charger has been pierced when you see the gas release into the bottle. You may also hear a slight hiss. This is normal and is part of the carbonation process.

### CAUTION

Do not lean over the bottle while attaching the sparkling wand; be sure the top is pointed away from anyone's face. Remove the wand only after the charger has completely finished discharging; never loosen or remove the wand while the charger is discharging.

- Fig. 4** Wait at least one minute for full carbonation to take place. The hiss will fade out.
- Fig. 5** Carefully unscrew and remove the sparkling wand from the bottle.
- Fig. 6** Remove the empty soda charger from the chamber and recycle it.
- Fig. 7** Enjoy your fizzy beverage!

**NOTE:** Be sure to rinse the sparkling wand under warm water directly after use.

## Tips for Best Results

### TO ACHIEVE PERFECT SPARKLING

- Use only cold liquids for optimal carbonation.
- Prepare the liquid mixture in the reusable bottle and pre-chill it in the refrigerator prior to carbonating.

### CAUTION

Keep the bottle away from temperatures below freezing; do not place in the freezer compartment.

### TO AVOID EXCESSIVE FOAMING

- Pre-chilling liquids reduces foaming.
- Do not fill beyond the lower level mark (3 cups/720 ml) with juices, iced teas, or alcohol. Different juices and juice combinations react differently to carbonation. (You may want to start below the lower level mark the first time you carbonate a beverage and adjust the amount as you learn how much foam is created).
- Liquids should not contain insoluble parts (for example: pulp, pieces, and seeds). Pass liquid through a fine strainer if needed.
- Carefully unscrew the sparkling wand after carbonating and allow excess gas to release.
- Dairy products cannot be carbonated.

### GET CREATIVE

- Directly carbonate your everyday juices and iced teas for a healthy, refreshing treat.
- Carbonate your favorite drinks and cocktails or try one of our recipes from the enclosed recipe booklet – let your inspiration sparkle!

### HYGIENE & STORAGE

- Regularly clean the reusable bottles, caps, and sparkling wand.
- Separate the reusable bottles and sparkling wand for storage and keep them in a clean place.
- If not used for an extended period of time, rinse with warm water before using.
- Please note the expiration date of the reusable bottles. Expired bottles should be replaced.

**CAUTION**

Any alteration of the product results in a risk of physical injury, and invalidates the warranty.

- For service issues, please contact iSi North America, Inc.'s Customer Service Dept.
- Always send in a complete Twist 'n Sparkle sparkling wand for repair (including the reusable bottle if it is damaged).

**Cleaning**

- Remove the cap and base cap from the reusable bottle.
- Hand wash the reusable bottle, cap, base cap, and the sparkling wand with warm (max. 122 °F/50 °C), soapy water.

**CAUTION**

Hand wash the product components only; do not put any component in a dishwasher; use only ordinary dish soap for washing. Do not boil product components; never use scouring agents or abrasive sponges/brushes.

Check the material compatibility of the cleaning detergent used before cleaning!

Product component	Material
Sparkling wand	PA, ABS, TPE, Aluminum, Stainless Steel, POM, NBR
Reusable bottle	PET
Reusable bottle – sealing cap	PP, Silicone
Reusable bottle – base cap	PP

**Troubleshooting****► Soda charger has not been pierced**

*The charger used is not compatible*

- Use only original iSi Sparklets soda chargers.

*The piercing unit has been damaged*

- Send the complete Twist 'n Sparkle sparkling wand to iSi North America, Inc.'s Customer Service Dept. for repair.
- Use only original iSi Sparklets soda chargers.

**► Liquid escapes while carbonating**

*Reusable bottle has been overfilled*

- Refer to "How to Use Your Twist 'n Sparkle, Instruction 1" for the maximum filling amount.

*Liquid contains pulp, pieces or seeds*

- Pass liquid through a fine strainer.

*Reusable bottle has been held at an angle while carbonating*

- Place the filled bottle in an upright and stable position.

*Too many chargers have been used*

- You only need one iSi Sparklets soda charger for one reusable bottle.

*The sparkling wand has been unscrewed too soon*

- Wait at least one minute for full carbonation and to allow excess gas to release from the bottle before unscrewing the sparkling wand. Refer to "How to Use Your Twist 'n Sparkle, Instruction 4".

**► The beverage contains no or hardly any carbonation**

*No soda charger has been inserted into the chamber of the sparkling wand*

- Insert one iSi Sparklets soda charger.

*The soda charger used was empty*

- Remove the empty soda charger and insert a new iSi Sparklets soda charger. Empty soda chargers will have a hole at the tip where it was pierced.

*Liquids used are not cold enough*

- The colder the liquids, the more bubbly the carbonation.
- Pre-chill liquids in the refrigerator before carbonating.

*The sparkling wand has been used many times in a short span of time*

- Unscrew the sparkling wand and remove the soda charger. Rinse the sparkling wand under warm water for at least 30 seconds. The sparkling wand is now ready for use again.

**► It is difficult to insert or remove the soda charger**

*The charger used is not compatible*

- Use only original iSi Sparklets soda chargers.

*Sparkling wand is not completely open*

- Always be sure to completely open the sparkling wand to insert or remove a soda charger from the chamber in the wand's handle. Refer to "How to Use Your Twist 'n Sparkle, Instruction 2".

*Sparkling wand is attached to the reusable bottle*

- When inserting or removing the soda charger, the sparkling wand must not be attached to the reusable bottle.

**Limited Warranty:** iSi warrants for a period of two years that the sparkling wand is free from defects in materials and workmanship and, if used only with other iSi products, will function as intended. iSi's liability in the event of the wand's failure to meet this warranty is limited to repair or replacement of the product or, at iSi's option or, if iSi is unable to deliver a replacement product, to refund the purchase price. In no event, however, shall iSi be liable for incidental or consequential damages. Any implied warranties for the sparkling wand are limited to the terms of this express warranty, including the two-year duration.

The components of the iSi Twist 'n Sparkle beverage carbonating system are designed and engineered to function together as a system. The safe and proper functioning of the system requires that only iSi chargers, which always bear the iSi mark, be used in the wand, and that the wand be used only with the bottle from iSi for this system. FAILURE TO FOLLOW EITHER OF THESE REQUIREMENTS OR ANY OTHER FAILURE TO FOLLOW THE INSTRUCTIONS FOR USE AND CARE OF THE PRODUCT INVALIDATES THIS WARRANTY AND ALL IMPLIED WARRANTIES FOR ANY COMPONENT OF THE SYSTEM IN THEIR ENTIRETY, AS DOES ANY PRODUCT MISUSE, ABUSE, ALTERATION OR MODIFICATION.

The disclaimer, warranty and remedies set forth above for the sparkling wand are exclusive and replace all others, oral or written, express or implied.

This Limited Warranty gives you specific legal rights and you also may have other rights which vary from state to state. Some states do not allow limitations on the duration of an implied warranty and some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

**FRANÇAIS****GARANTIE LIMITÉE**

**Garantie limitée:** iSi garantit, pour une période de deux ans, que la tige de gazéification ne présentera pas de défaut de matériel ni de fabrication et qu'elle fonctionnera normalement si elle est utilisée exclusivement avec d'autres produits iSi. En cas de défaut de la tige, la responsabilité d'iSi se limite à la réparation ou au remplacement du produit ou, à l'initiative d'iSi, au remboursement du prix d'achat si iSi n'est pas en mesure de fournir un produit de remplacement. En aucune circonstance iSi ne peut être tenue responsable de dommages consécutifs ou indirects. Toute garantie implicite relative à la tige de gazéification est limitée aux conditions de cette garantie expresse, y compris la durée de deux ans.

Les composants du système de gazéification de boissons Twist 'n Sparkle d'iSi sont conçus et fabriqués pour fonctionner ensemble en un système. Le fonctionnement correct et sûr du système exige l'utilisation exclusive de cartouches iSi (portant toujours la marque iSi) dans la tige, ainsi que l'utilisation exclusive de la tige avec une bouteille iSi destinée à ce système. LE NON RESPECT DE CES CONDITIONS OU LE NON RESPECT DES INSTRUCTIONS D'UTILISATION ET D'ENTRETIEN DU PRODUIT, DE MÊME QUE L'UTILISATION NON CONFORME, LE MAUVAIS TRAITEMENT, L'ALTÉRATION OU LA MODIFICATION DU PRODUIT, ANNULE CETTE GARANTIE ET TOUTES LES GARANTIES IMPLICITES RELATIVES À CHAQUE COMPOSANT DU SYSTÈME.

L'avis de non-responsabilité, la garantie et les recours définis précédemment pour la tige de gazéification sont exclusifs et remplacent tous les autres, oraux ou écrits, explicites ou implicites.

Cette garantie limitée vous confère des droits spécifiques, cependant il se peut que vous disposiez d'autres droits qui varient d'un État/pays à l'autre. Certains États/pays n'autorisent pas la limitation de durée pour une garantie implicite, certains États/pays n'autorisent pas l'exclusion ou la limitation des dommages accessoires ou indirects. Par conséquent, il se peut que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

**ESPAÑOL****GARANTÍA LIMITADA**

**Garantía limitada:** iSi garantiza, por un periodo de dos años, que la varilla de gasificación está libre de todo defecto en sus materiales y su confección y, si la utiliza únicamente con otros productos de iSi, funcionará como es debido. En caso de avería en la varilla, la responsabilidad de iSi con respecto a esta garantía estará limitada a la reparación o sustitución del producto, a juicio de iSi, o al reembolso del precio de compra si iSi es incapaz de sustituir el producto. iSi no se hará responsable, en ningún caso, de los daños accidentales o consecuenciales. Toda garantía que aluda a la varilla de gasificación estará limitada a los términos de esta garantía, incluyendo la duración de dos años.

Los componentes del sistema de gasificación de bebidas iSi Twist 'n Sparkle han sido diseñados para funcionar como un sistema. Para que el sistema funcione de forma segura y apropiada, es necesario utilizar cápsulas iSi (que siempre llevan la marca iSi) en la varilla, la cual a su vez sólo debe utilizarse con botellas iSi. SI NO SE CUMPLE ALGUNO DE ESTOS REQUISITOS O NO SE SIGUEN FIELMENTE LAS INSTRUCCIONES DE USO DEL PRODUCTO, TANTO ESTA GARANTÍA COMO AQUELLAS RELACIONADAS CON ALGUNO DE LOS COMPONENTES DEL SISTEMA EN SU CONJUNTO QUEDARÁN INVALIDADAS, COSA QUE TAMBIÉN OCURRIRÁ CON EL MAL USO, ABUSO, ALTERACIÓN O MODIFICACIÓN DEL PRODUCTO.

El descargo de responsabilidades, la garantía y los recursos especificados más arriba para la varilla de gasificación son exclusivos y sustituyen a cualquier otro texto oral o escrito, ya sea explícito o implícito.

Esta Garantía limitada le proporciona derechos legales específicos, pero es posible que también pueda disfrutar de otros derechos según el estado en el que viva. Algunos estados no permiten limitaciones en la duración de una garantía, y otros no permiten la exclusión o limitación de daños accidentales o consecuenciales, por lo que tal vez algunas de las limitaciones o exclusiones dispuestas más arriba no sean aplicables a su persona.