 


Filling Instructions



 
Standard Chef's Mill

- Unscrew top knob. Lift and remove lid.
- Pour peppercorns into bottom container and reassemble.

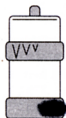

Combination Mills

- Unscrew top knob. Lift and remove lid.
- Lift and remove salt container. Refill with table salt.
- Pour peppercorns into bottom container and reassemble.

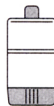


Genie Combo - Genie Combination Mills

- Unscrew top knob. Lift and remove lid.
- Lift and remove salt container. Refill with table salt.
- After removal of salt container, turn pepper container upside down.
- Lift chrome base and turn 90°. Fill with peppercorns.
- Lift and rotate to return base to original position. Reassemble.



Mills with Crank Handles

- Unscrew top knob. Lift and remove lid and handle assembly.
- Pour peppercorns into bottom container and reassemble.

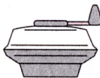

Nut Twister - Nutmeg Mill

- Hold mill upside down. To open, rotate base counter clockwise.
- Center nutmegs on prongs, as shown.
- Replace base by compressing spring, and twist clockwise to lock in place.



Genie Mills

- Turn mill upside down.
- Lift chrome base and turn 90°. Fill with peppercorns.
- Lift and rotate to return base to original position. Reassemble.

Use & Care Tips

When refilling the salt chamber in a combination mill, be sure to clean the stem. Salt is very corrosive, and a build-up of salt can be detrimental to your mill. Applying a drop of cooking oil on the threads, at the top of the stem where the top nut is screwed on, is also recommended.

Adjusting Milling Mechanism

Mills with adjusting rings:

Grip the ring and twist it clockwise, locking it into a position, to increase the size of the crushed pepper, and counter-clockwise to decrease the size. There are three adjustments - fine, medium and coarse.

Mills without adjusting rings:

Turn the top screw clockwise to increase the size of the crushed pepper, and counter-clockwise to decrease the size.

Mills with adjustment dial on bottom:

Turn dial on the bottom of the mill, line up arrow toward the smallest dot for fine mill & toward larger dot for coarse.

Limited Lifetime Warranty

Thank you for purchasing a William Bounds product. All William Bounds mechanisms are guaranteed to be free from defects in materials and workmanship for as long as you own your pepper mill. Should the mechanism stop working, or should it not perform to your satisfaction, you may return it to the retailer you purchased it from, or you may send your mill to William Bounds, Ltd., 3737 W. 240th St., Torrance, CA 90505. Enclosing \$6.00 to cover Postage and Handling. This warranty does not cover breakage or other damage due to normal wear, abuse or mishandling. Decisions as to the cause of damage are the responsibility of William Bounds, and all decisions made in this regard are final.



WILLIAM BOUNDS LTD.

©2001 William Bounds, Ltd., P.O. Box 1547
Torrance, CA 90505-0547 www.wmboundsltd.com
"On the third planet from the sun."



WILLIAM BOUNDS LTD.