



PORKERT UNIVERSAL GRINDER

PORKERT®

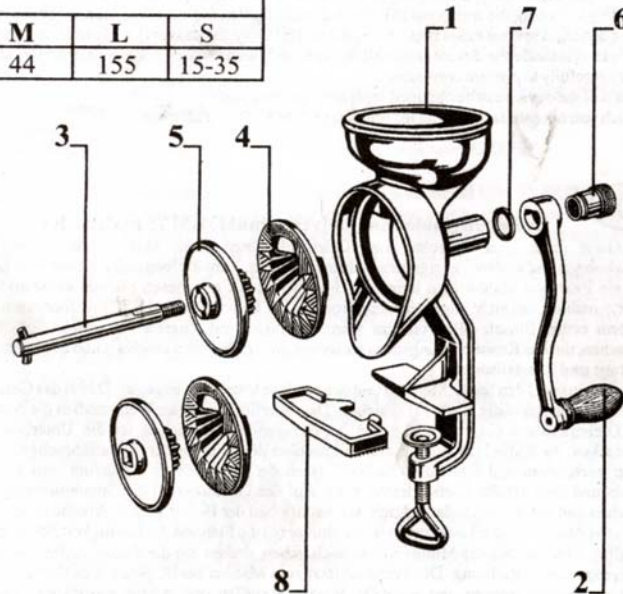

(UM75-4)

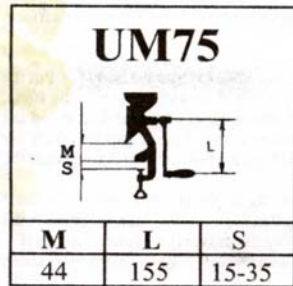

Operation Instructions for PORKERT® Universal Grinder UM 75

The grinder is designed to grind cereals, spices, coffee beans and other suitable foodstuff. For coffee bean grinding an extra pair of grinding stones is provided. To avoid undesirable transmission of aroma (e.g. of spices) into coffee we highly recommend not grinding other foodstuff with these.

Before using the device for the first time, dismantle it and wash all its parts with warm water with a small addition of dishwashing detergent to remove preservation oil from the surface. Rinse them with drinking water, and dry well.

Device Assembly and Adjustment:

Insert the fixed grinding stone (4) and the rotating grinding stone (5) into the body (1). Put the shaft (3) through both the stones so that the shaft cross pin fits in the slot in the rotating stone. Slide the washer (7) on the protruding end of the shaft, attach the crank (2) and screw on the spring nut (6). Tighten the nut, and consequently, loosen it so that there is gap necessary for grinding, and the crank can be turned. Put the rubber pad (8) on the foot of the unit and mount the unit on a desk by tightening the fixing screw.

At the beginning of the grinding, adjust the device to get the required texture of the foodstuff ground by loosening the spring nut (6). If you need to tighten the nut again, turn the crank in the reverse direction several times first. Once adjusted this way, the device is ready to be operated.

After use, dismantle the device, wash all its parts with warm water, rinse with drinking water, and dry carefully to prevent corrosion.

All parts of the device can be obtained separately as spare parts.

We wish you full satisfaction with the product of PORKERT® trademark.